

FASports Dry Bag




Vor Gebrauch überprüfen

Die FASports Drybags bestehen aus robustem Material, jedoch kann es im Gebrauch zu Beschädigungen des Materials kommen. Vor der Verwendung in extrem nassen Bedingungen wie Wasseraktivitäten ist es deshalb wichtig, die Tasche auf Schäden zu überprüfen.

Verschließen der FASports Drybag mit dem Rollverschlussystem

Um sicherzustellen, dass kein Wasser in die Tasche eindringt, muss diese ordnungsgemäß verschlossen werden. Für den Einsatz bei starkem Regen oder in Wasserumgebungen sollte der Rollverschluss so fest wie möglich verschlossen werden. Die folgenden Bilder zeigen, wie man den Rollverschluss korrekt schließt:

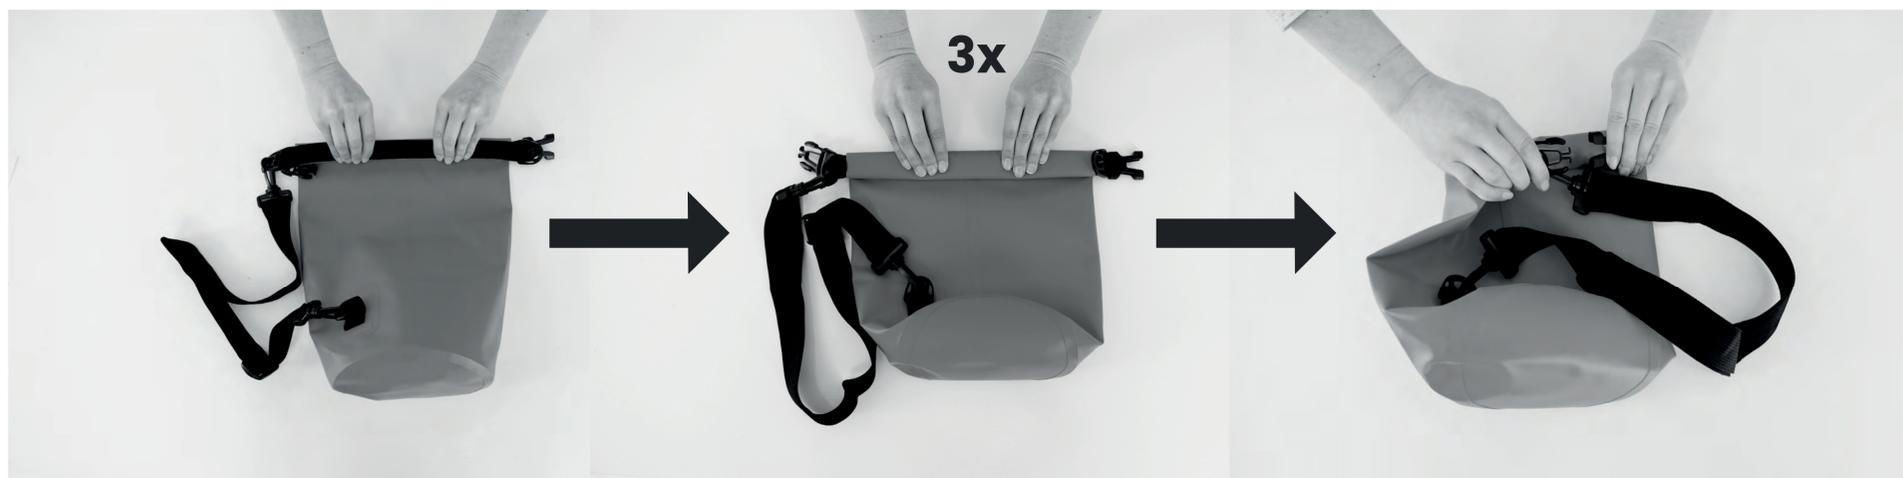

Achtung vor Beschädigungen

WARNUNG! Niemals spitze oder scharfkantige Gegenstände verstauen! Obwohl die Drybags sehr robust sind, sollten sie nicht auf spitzen Gegenständen (z. B. Dornen) abgelegt oder über scharfe Felsen gezogen werden. Es sollten auch keine Fischhaken, Messer oder ähnliche Gegenstände aufbewahrt werden, die das Material der Drybag durchstechen könnten und die Tasche dadurch undicht machen.

Wasch- und Pflegeanleitung

Bei Bedarf kann die Drybag mit einem feuchten Tuch oder einem weichen Schwamm und sauberem Wasser gereinigt und zum Trocknen aufgehängt werden. Verwenden Sie keine scharfen Reinigungsmittel. Reinigen Sie das Produkt nach dem Gebrauch in salzhaltigen Umgebungen, um Schäden durch Salzablagerungen zu vermeiden. Das Oberflächenmaterial kann bei längerer Sonneneinstrahlung und durch andere Einflüsse in der Umwelt verblassen oder sich verfärben. FASports übernimmt keine Haftung für Schäden, die durch solche Umstände entstehen.

Schwimmeigenschaft

ACHTUNG! Wenn die Drybag ins Wasser fällt, schwimmt sie auf der Wasseroberfläche. **Sie ist jedoch kein Auftriebskörper und darf nicht als Schwimmhilfe verwendet werden!**

Art.-Nr.: 07170, 07171, 07172, 07173

Made in China

Importer: 3e oem sports AG

Flurweg 11

82402 Seeshaupt

Germany

FASports Dry Bag




Check Your Bag Before Use

ASports Dry bags are made of sturdy material but still punctures can happen, so make sure that you check your bag before using it in extremely wet conditions such as floating in water etc.

Closing FASports Dry Bags with The Roll-top Closure

To keep the water out of your dry bag it is very important to close it properly. For conditions such as heavy rain and water use, it is important to make the roll down as tight as possible. The following images demonstrate how to correctly close the roll down top:

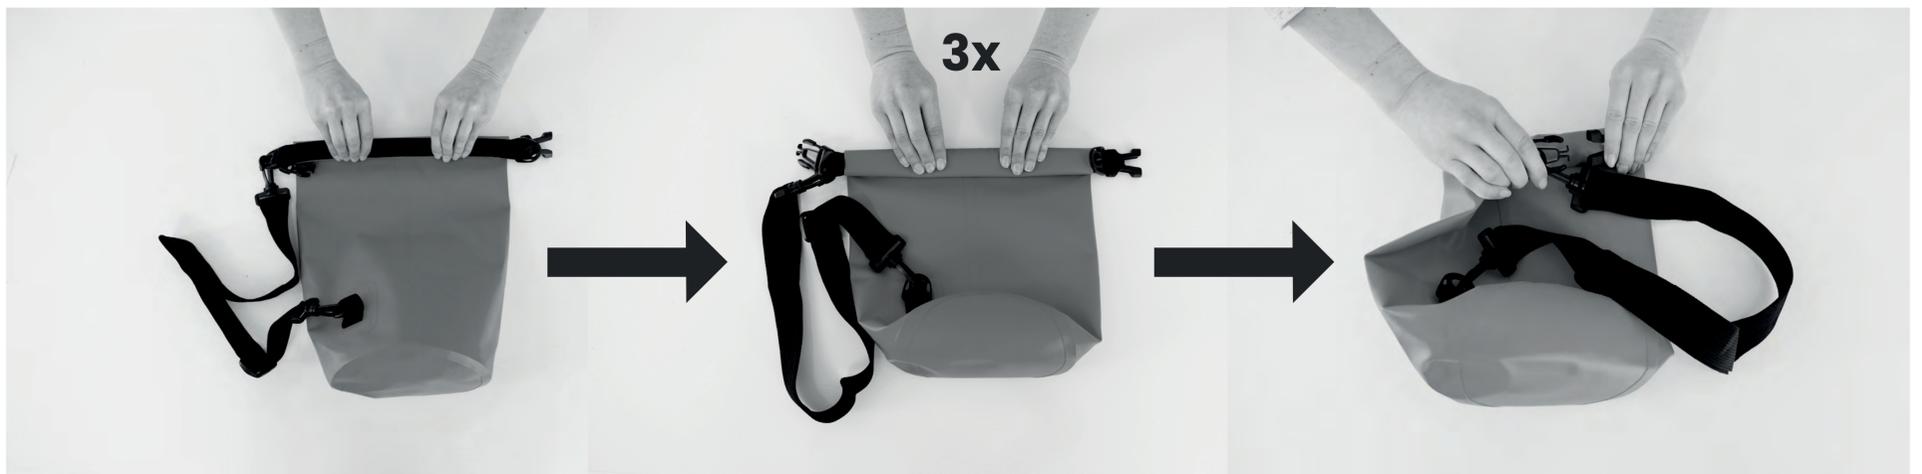

Punctures

WARNING! Never store pointy or sharp-edged objects! Dry bags are very sturdy, but avoid putting them on sharp objects (thorns etc...) or dragging them over sharp rocks, using them to carry exposed fish hooks, knives etc... Sharp objects can puncture the material making your bag no longer waterproof.

Washing & Care Instructions

If your dry bag gets dirty you can simply clean it with a wet wipe or a soft cloth or sponge with clean water and hang it up to dry. Do not use strong cleaning agents. Clean the product after using in salty condition, to avoid damage from salt. Surface materials can experience color changes or fading when exposed to direct sunlight for extended periods of time and by environmental factors. FASports assumes no liability for this.

Flotation

WARNING! Dry bags will float on water surface if you drop them into the water or sea. However, **they are NOT flotation devices and should not be used as such!**